
Transition from **Simple POP** to **Simple Create**

Explanatory Guide

Simple POP



Simple Create

Migration Procedure

Simple Create serial key issuance workflow

Simple Create serial key issuance page

<https://miws.mimaki.jp/upgradePOPtoCreate/servicemain.aspx>

1 Start Simple POP license authentication and check the serial key used for license activation.
**Please use a serial key that has been authenticated with Simple POP.*



2 Displays the serial key issue page for Simple Create.



3 After entering the serial key used for Simple POP, click [Issue Serial Key].



4 A serial key for Simple Create will be issued.



5 Launch Simple Create and activate with the issued serial key.

Migration Procedure 1

1


Start Simple POP license authentication and check the serial key used for license authentication.

***Please use a serial key that has been authenticated with Simple POP.**

Start License Activation




Deactivate License

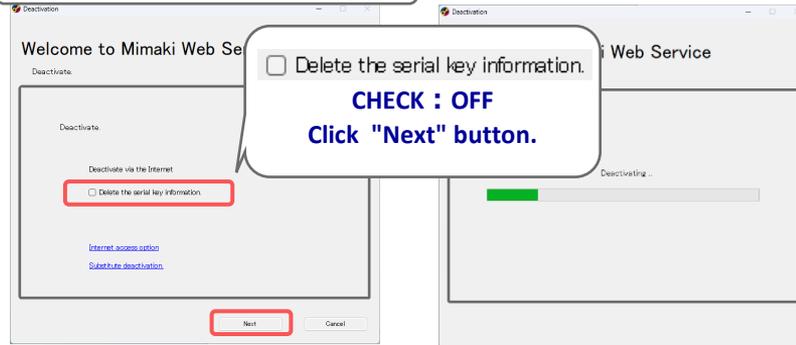

Start License Activation



Activate License

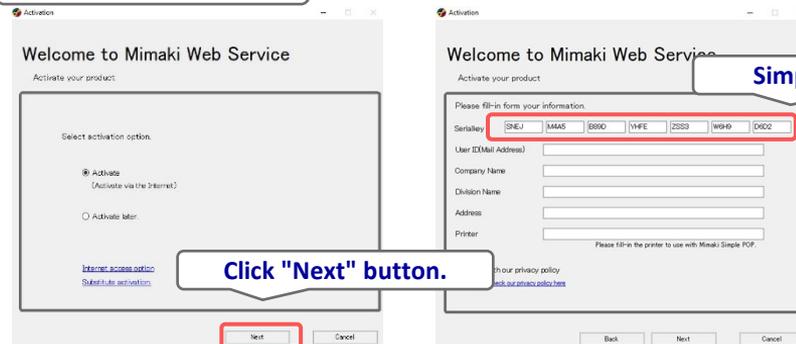

Migration Procedure 2

2 Displays the serial key issue page for Simple Create.

Simple Create serial key issuance page
<https://miws.mimaki.jp/upgradePOPtoCreate/servicemain.aspx>



Serial key issuing service for Simple Create users

Simple POP



Simple Create

Please enter the serial key for Simple POP that was used in activation.


 - - - - - -

Issue a serial key

MIMAKI ENGINEERING CO.LTD.

Migration Procedure 3

3 After entering the serial key used for Simple POP, click [Issue Serial Key].

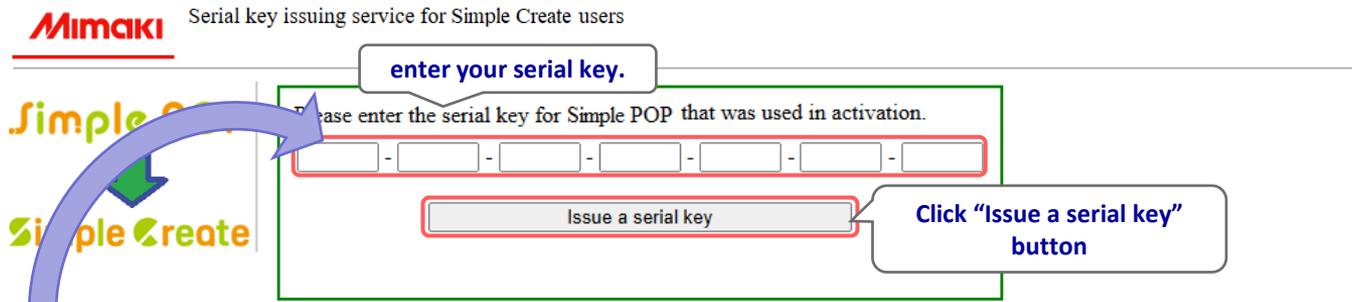

MIMAKI ENGINEERING CO.LTD.



Migration Procedure 4

4 A serial key for Simple Create will be issued.

Please enter the serial key for Simple POP that was used in activation.

SNEJ	M4A5	B89D	YHFE	ZSS3	W6H9	D6D2
------	------	------	------	------	------	------

Issue a serial key

A serial key for Simple Create was issued.

PJ67-TEM3-XHSZ-KCBJ-XGPK-13LL-Z15A

Simple Create serial key

Migration Procedure 5

5 Launch Simple Create and authenticate with the serial key you issued.

Please enter the serial key for Simple POP that was used in activation.

SNEJ	M4A5	B89D	YHFE	ZSS3	W6H9	D6D2
------	------	------	------	------	------	------

Issue a serial key

A serial key for Simple Create was issued.

PJ67-TEM3-XHSZ-KCBJ-XGPK

License

Activation/Deactivation

SerialKey
XXXX-XXXX-XXXX-XXXX-XXXX-XXXX-XXXX

Agree with our privacy policy (<https://mimaki.com/privacy.html>)

[Privacy Policy](#)

Not activated [Activation](#)

[Substitute activation](#)

[Input license key file](#)

Enter the serial key you issued.

Close

FAQ

#	Questions	Answers
1	License Activation has not been performed because Simple POP has not been installed.	To issue a serial key for Simple Create, you need a serial key that has undergone license activation with Simple POP. Please perform license activation after installation.
2	Can I issue a serial key for Simple Create even if I have performed substitute activation for Simple POP license authentication?	You can issue it.To issue a serial key for Simple Create, you need to access the web. Please issue it on a PC that can access the web page..
3	Can I use Simple POP after issuing a serial key for Simple Create?	Available for use.
4	Can data created and saved in Simple POP be used in Simple Create?	No, it cannot be used. Please create new data using Simple Create, which allows you to create a wide variety of designs with simple operations.
5	Can I install Simple Create on a PC that has Simple POP installed and use them at the same time?	Available for use.
6	I performed license activation for Simple POP using substitute activation. Can I still check the serial key in this case?	The serial key confirmation for Simple POP is the same as in "Migration Procedure 2."To disable substitute activation for the serial key,set 'Delete serial key information' to OFF, and then perform the following steps to enable serial key activation.